

eurolite® LED BL-10

Lounge-Deko-Lichterkette
Lounge Decoration Light Chain

No. 50499024



www.eurolite.de

DE. BEDIENUNGSANLEITUNG

Vielen Dank für den Kauf dieser Lichterkette, die für stimmungsvolles Licht im Garten oder auf dem Balkon sorgt. Durch die eingesetzten LEDs ist das Produkt extrem langlebig, energiesparend und entwickelt kaum Wärme.

SICHERHEITSHINWEISE ⚠

Bitte lesen Sie vor der Verwendung des Produkts diese Informationen. Sie erhalten dadurch wichtige Hinweise für den korrekten Betrieb. Bewahren Sie diese Anleitung für weiteren Gebrauch auf.

Verwendungszweck

- Dieses Produkt ist zur Dekoration und nicht als Raumbeleuchtung geeignet. Es kann sowohl im Innen- als auch im Außenbereich eingesetzt werden: Es ist gegen Spritzwasser geschützt (Schutzart IP44). Tauchen Sie das Produkt aber nicht in Wasser oder andere Flüssigkeiten. Der ideale Temperaturbereich liegt bei -5 bis +45 °C.
- Verwenden Sie das Produkt ausschließlich gemäß den hier gegebenen Vorgaben. Bei Schäden, die durch Nichtbeachten dieser Anleitung verursacht werden, erlischt der Garantieanspruch. Für Folgeschäden wird keine Haftung übernommen.
- Bei Sach- oder Personenschäden, die durch unsachgemäße Handhabung oder Nichtbeachten der Sicherheitshinweise verursacht werden, übernehmen wir keine Haftung und es erlischt jeder Garantieanspruch.
- Aus Sicherheitsgründen ist das eigenmächtige Umbauen oder Verändern des Produkts nicht gestattet und hat den Verfall der Garantieleistung zur Folge.

Gefahr durch Elektrizität

- Um Stromschläge zu vermeiden, niemals irgendeinen Teil des Produkts öffnen. Nur an eine vorschriftsmäßige Steckdose anschließen, die der Produktspezifikation entspricht.
- Dieses Produkt darf nicht mit anderen Lichterketten o. Ä. elektrisch verbunden werden.
- Dieses Produkt darf nur mit dem beiliegenden Netzadapter verwendet werden.
- Die Reinigung beschränkt sich auf die Oberfläche. Dabei darf keine Feuchtigkeit in Anschlussräume oder an Netzspannung führende Teile gelangen. Wischen Sie das Produkt nur mit einem trockenen, fusselfreien Tuch ab. Zuvor den Netzstecker aus der Steckdose ziehen.
- Wenn das Produkt nicht mehr ordnungsgemäß funktioniert oder Schäden aufweist, nehmen Sie es bitte außer Betrieb und kontaktieren Ihren Fachhändler. Niemals selbst Reparaturen durchführen.

Gefahr für Kinder

Das Produkt ist kein Spielzeug. Halten Sie es vor Kindern und Haustieren fern. Lassen Sie Verpackungsmaterial nicht achtlos liegen.

Warnung vor Verletzungen

- Die verwendeten LEDs sind fest verbaut und können nicht ausgetauscht werden.
- Achtung, LED-Licht: Schauen Sie nicht für längere Zeit direkt in die Lichtquelle.
- Gehen Sie vorsichtig mit dem Produkt um. Durch Stöße, Schläge oder dem Fall aus bereits geringer Höhe wird es beschädigt.
- Verlegen Sie das Anschlusskabel so, dass es nicht zur Stolperfalle wird.


Umweltschutz

Übergeben Sie das Produkt am Ende der Nutzungsdauer zur umweltgerechten Entsorgung einem örtlichen Recyclingbetrieb. Geräte, die mit diesem Symbol gekennzeichnet sind, dürfen nicht im Hausmüll entsorgt werden. Für weitere Informationen wenden Sie sich bitte an Ihren Händler oder die zuständige örtliche Behörde.

INBETRIEBNAHME

Stecken Sie den Stecker des Anschlusskabels in den Netzadapter und drehen Sie die Überwurfmutter gut fest. Nur so ist ein Schutz vor Spritzwasser gegeben. Stecken Sie den Netzadapter in eine geeignete Steckdose. Die LED-Birnen leuchten. Hängen Sie die Lichterkette an den Befestigungshaken auf. Zum Ausschalten ziehen Sie den Netzadapter aus der Steckdose. Wird das Produkt längere Zeit nicht benötigt, den Netzadapter aus der Steckdose ziehen, um unnötigen Stromverbrauch zu vermeiden.

TECHNISCHE DATEN

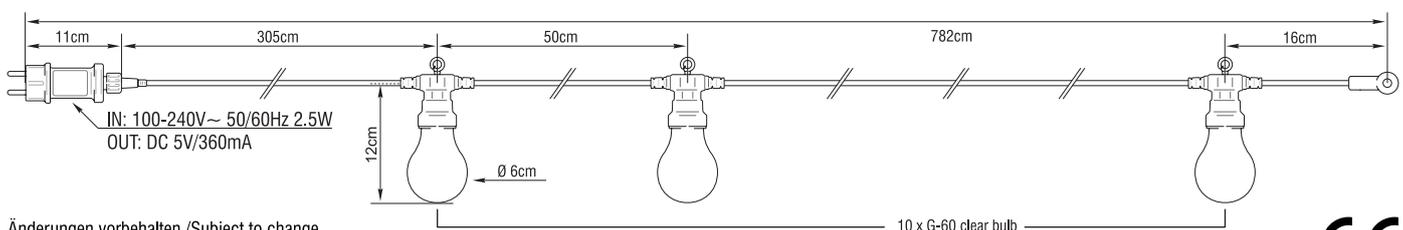

Änderungen vorbehalten./Subject to change.

EN. USER MANUAL

Thank you for purchasing this LED light chain, which is the perfect way to light up your balcony, patio or garden. This product is fitted with LEDs that consume little power, have an extremely long service life and develop little heat.

SAFETY WARNINGS ⚠

Please read these instructions carefully before using the product. They contain important information for the correct use of your product. Please keep them for future reference.

Intended use

- This product is designed for decoration and is not suitable for household lighting. It is suitable for use both indoors and outdoors and is splash-proof (protection grade IP44). However, do not immerse the product in water and do not let any water get into the product. The recommended temperature range is -5 to +45 °C.
- Only use the product according to the instructions given herein. Damages due to failure to follow these operating instructions will void the warranty! We do not assume any liability for any resulting damage.
- We do not assume any liability for material and personal damage caused by improper use or non-compliance with the safety instructions. In such cases, the warranty/guarantee will be null and void.
- Unauthorized rebuilds or modifications of the product are not permitted for reasons of safety and render the warranty invalid.

Danger due to electricity

- To reduce the risk of electric shock, do not open any part of the product. Only connect the product to a proper wall socket that complies with the product specification voltage.
- The product must not be electrically connected to other light chains or anything similar.
- The product must be used only with the supplied power adapter.
- Cleaning of the product is limited to the surface. Make sure that moisture does not come into contact with any areas of the terminal connections or mains voltage control parts. Only wipe off the product with a dry, lint-free cloth. Before cleaning, disconnect the product from the mains.
- If this product is no longer working properly or is visibly damaged, take it out of operation and consult your local dealer. Do not attempt to repair the product yourself.

Danger to children

This product is not a toy. Keep it out of the reach of children and pets. Do not leave packaging material lying around carelessly.

Warning - risk of injuries

- The built-in LEDs are permanently installed; they cannot be replaced.
- Caution, LED light: Do not look directly at the light source for long periods.
- Handle the product with care, it can be damaged by impacts, blows, or accidental falls, even from a low height.
- Run the mains cable in such a way that it cannot be tripped over.

Protecting the environment

When to be definitively put out of operation, take the product to a local recycling plant for a disposal which is not harmful to the environment. Devices marked with this symbol must not be disposed of as household waste. Contact your retailer or local authorities for more information.

OPERATION

Insert the connecting cord plug into the power adapter and tighten the lock nut to make sure the product is protected against splash water. Insert the power adapter into a suitable wall socket. The LED bulbs will light up. Hang the light chain using the attachment hooks. To switch the light chain off, unplug the power adapter from the socket. If the product is not used for a longer period, disconnect the adapter from the mains socket, to prevent unnecessary power consumption.

TECHNICAL SPECIFICATIONS

